
400 SERIES WOODWRIGHT® DOUBLE-HUNG FULL-FRAME WINDOWS




Woodwright® Double-Hung Window Details

Scale $1^{1/2}$ " (38) = 1'-0" (305) - 1:8

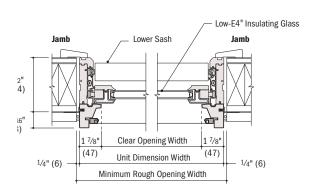


Horizontal Section

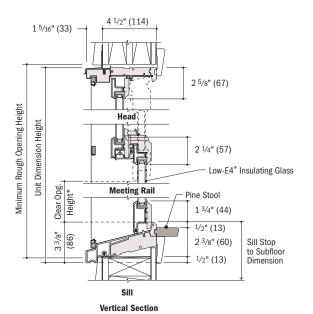


Woodwright® Picture Window Details

Scale $1^{1/2}$ " (38) = 1'-0" (305) - 1:8

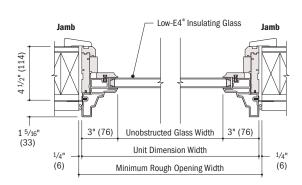

Horizontal Section

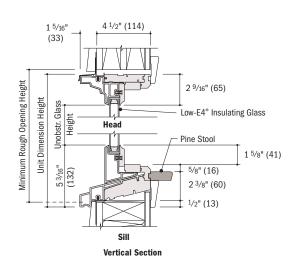

2021-22 400 Series Product Guide Page 1 of 2

Light-colored areas are parts included with window, Dark-colored areas are additional Andersen® parts required to complete window assembly as shown.

[·] Minimum rough openings may need to be increased to allow for use of building wraps, flashing, sill panning, brackets, fasteners or other items.

Details are for illustration only and are not intended to represent product installation methods or materials. Refer to product installation guides at andersenwindows.com.

Dimensions in parentheses are in millimeters


^{*}Clear opening height dimension is less on arch, unequal leg arch and Springline™ hung windows.

400 SERIES WOODWRIGHT® DOUBLE-HUNG FULL-FRAME WINDOWS




Woodwright® Transom Window Details

Scale $1^{1/2}$ " (38) = 1'-0" (305) - 1:8

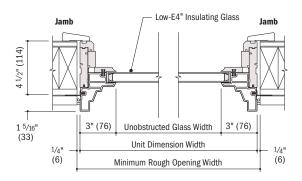

Horizontal Section

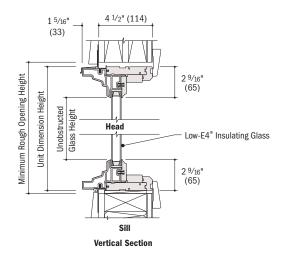

[•] Minimum rough openings may need to be increased to allow for use of building wraps, flashing, sill panning, brackets, fasteners or other items.

• Details are for illustration only and are not intended to represent product installation methods or materials. Refer to product installation guides at andersenwindows.com.

• Dimensions in parentheses are in millimeters.